

## Further Reading

Creo Parametric 2.0 software (2012) PTC learning exchange tutorials. Copy right of Parametric Technology Inc.  
PTC Learning Exchange Resource. Available at [http://learningexchange.ptc.com/tutorials/by\\_sub\\_products.id:1](http://learningexchange.ptc.com/tutorials/by_sub_products.id:1)  
<http://www.ptc.com>

# Index

## A

- Appearance gallery icon
  - std-metals.dmt; adv-metal-brass.dmt, [24](#), [26](#)
- Applications menu bar, [245](#), [262](#), [264](#), [276](#), [288](#), [290](#)
- Applications toolbar
  - expert machinist; NC process, [262](#), [265](#), [277](#), [290](#), [291](#)
- ASM datum plane, [45](#), [73](#), [110](#)
- Auto workpiece creation toolbar, [218](#)
- Automatic section box
  - constraining imported reference model/part, [46](#), [74](#), [111](#), [391](#)
- Automatic workpiece
  - auto-workpiece creation toolbar, [75](#), [157](#), [158](#), [218](#), [329](#), [333](#), [334](#), [357](#), [361](#), [389](#), [393](#), [459](#)

## C

- Chamfer icon tab
  - chamfer; fillet, [20](#)
- Check mark icon
  - OK icon, [14](#), [15](#), [23](#), [39](#), [46](#), [52](#), [55](#), [74](#), [76](#), [80](#), [82](#), [86](#), [111](#), [118](#), [128](#), [146](#), [158](#), [162](#), [164](#), [172](#), [173](#), [185](#), [186](#), [205](#), [223](#), [224](#), [229](#), [246](#), [247](#), [253](#), [281](#), [282](#), [330](#), [333](#), [334](#), [338](#), [352](#), [360](#), [362](#), [365](#), [366](#), [373](#), [375](#), [380](#), [390](#), [392](#), [393](#), [399](#), [410](#), [414](#), [418](#), [419](#), [425](#), [426](#), [429](#), [433](#), [438](#), [439](#), [459](#), [460](#), [466](#), [467](#), [481](#), [482](#), [492](#), [493](#), [502](#), [503](#), [509](#), [510](#), [518](#), [519](#), [525](#), [527](#), [528](#), [535](#), [536](#), [542](#), [543](#), [547](#), [548](#), [553](#), [554](#), [559](#), [560](#), [579](#), [583](#), [586](#), [590](#), [605](#), [608](#), [609](#)
- CLEAR\_DISTANCE, [56](#), [86](#)
- Clearance tab
  - clearance panel, [51](#), [52](#), [81](#), [118](#), [144](#), [163](#), [224](#), [398](#), [417](#), [419](#), [435](#), [467](#), [524](#)

- Component placement application tools
  - component placement, [110](#), [458](#), [604](#)
  - configuration editor, [58](#), [59](#), [90](#), [91](#), [610](#)–[612](#)
- CONFIRMATION dialogue box, [40](#), [41](#)
- Constrain the imported part
  - ASM datum plane; default constraint, [45](#), [73](#), [389](#)
- Coordinate system
  - programme zero, [47](#)–[49](#), [51](#), [54](#), [69](#), [77](#)–[79](#), [81](#), [85](#), [114](#)–[116](#), [118](#), [141](#), [142](#), [157](#), [159](#)–[161](#), [163](#), [217](#), [219](#)–[223](#), [241](#), [250](#)–[329](#), [334](#)–[336](#), [351](#), [357](#), [363](#), [364](#), [369](#), [374](#), [377](#), [394](#)–[396](#), [402](#), [403](#), [411](#), [416](#), [421](#), [426](#), [430](#)–[432](#), [461](#)–[464](#), [466](#), [524](#), [578](#), [582](#), [584](#), [588](#), [605](#)–[607](#), [609](#)
- Coordinate system dialogue box, [77](#), [78](#)
  - origin tab; orientation tab; properties tab, [47](#)
- CORNER ROUNDING
  - tool, [259](#)
- Create model icon
  - enter new NC model name dialogue box, [246](#)
- Create new material icon, [30](#)
- Creo parametric
  - CAD software, [13](#), [40](#), [41](#), [58](#), [69](#), [90](#), [108](#), [157](#), [217](#), [329](#), [357](#), [359](#), [389](#), [390](#), [456](#), [457](#), [601](#), [603](#), [610](#)–[613](#)
- Creo parametric options dialogue window, [58](#)
- Cut control tab
  - maximum cut group, [272](#), [303](#), [309](#), [313](#)
- Cut definition dialogue box
  - reference to X-axis; cut angle references, [198](#), [199](#), [236](#), [570](#), [571](#), [619](#), [625](#), [626](#)
- CUT\_FEED, [55](#), [56](#), [86](#)
- Cutter location (CL), [13](#), [69](#), [139](#), [141](#), [157](#), [206](#), [241](#), [319](#), [356](#), [357](#), [389](#), [455](#), [592](#)

- Cutting tool, 53, 56, 57, 83, 87, 107, 119, 136, 137, 147, 157, 180, 190, 200, 217, 230, 232, 238, 254, 268, 269, 274, 283, 284, 286, 287, 300, 304–307, 310, 311, 314, 338, 340, 342, 355, 357, 366–368, 371, 375, 377, 380, 381, 389, 411, 414–416, 426, 429, 430, 443, 444, 483, 487, 488, 495, 498, 499, 504, 506, 511, 514, 520, 523, 529, 532, 537, 538, 540, 544, 545, 549, 551, 555, 557, 561, 563, 566, 572, 573, 591, 609, 629, 630
- Cutting tools icon, 53, 83, 119, 165, 224, 338, 366, 399, 468, 609
  
- D**
- Default constraint, 45, 73, 110, 248
- DEFINE WIND group, 227
- Drill group dialog box, 297
- Drilling, 461
  - drilling.1(OP010), 201–205, 264, 315–319, 389, 402, 415–420, 455, 462, 577, 579–587, 590, 591
  - tool, 255, 401
- Drilling properties dialog window, 316
- Drilling strategy dialog window, 315
- Drilling tool, 317
- Drilling toolbar, 202
  
- E**
- Edit parameters of sequence “volume milling”, 130–132, 135, 176–178, 188, 189, 284, 285, 521
- Edit parameters of sequence “volume milling” dialog box, 284
- Ellipse, 172
- END MILL
  - tool, 83, 88, 119, 142, 165, 192, 232, 233, 256, 258, 260, 441, 468
- Engraving, 13, 36, 47, 54–57, 60, 66
- Engraving 1[OP010], 56
- Expert machinist
  - two-and-half axis machining process, 241–245, 261, 264, 265, 290, 291, 319, 323, 356
- Extrude direction arrow icon, 126, 127, 173
- Extrude icon
  - extrude toolbar, 22, 121, 168, 182, 278, 436, 481, 492, 493, 503, 518, 527, 535, 542, 548, 554, 559
  
- F**
- Face, 69, 84, 85, 87–89, 92, 97, 265–271, 273–276, 319
- Face feature dialog box
  - define feature floor; define program zero, 265, 266
- Face icon, 265
- Face milling 1[OP010], 87
- Face milling application toolbar
  - references tab; parameters tab; clearance tab; options tab; tool motions tab; process tab; properties tab, 85
- Face milling dialog window, 267–269
- Face milling operation, 88, 92, 97, 266, 268, 271, 274, 275
- Face milling operation 1 [OP010], 92
- FACE1 [OP010]
  - create toolpath; place template, 267
- Feed rates tab
  - feed rate group, 271, 303, 309, 312, 317
- File open dialog window, 73
- Fillet icon
  - fillet, 20
- Find option dialog window, 59, 60, 91, 92, 612, 613
- Finish speed, 270, 302, 308, 312
- Font group
  - cal\_alf, 38, 39
  
- G**
- G-codes, 13, 65, 66, 97, 139, 141, 153, 154, 157, 211, 241, 323, 387, 450, 451, 455, 600
  
- H**
- Hole group icon, The, 296
- Holes, 166, 167, 201, 202, 204, 262–264, 299, 416, 461, 573, 575, 576, 578, 582, 585, 589
  
- I**
- Import part
  - add stock
    - constrain part, 246
- Imprint, 37, 39
- INFORMATION WINDOW, 65, 97, 153, 210, 322, 386, 450, 451, 598, 600
  
- L**
- Library, 24, 34
- List of default materials
  - red arrow, 29
  
- M**
- Main graphic window, 17, 19–21, 37, 45–47, 53, 57, 64, 65, 72, 73, 75, 77, 82, 87, 94, 95, 97, 109–111, 116, 117, 121,

- 136, 145, 147, 152, 153, 159, 162, 165, 168, 170, 174, 175, 180, 183–185, 188, 191, 192, 196, 198, 204, 208, 209, 224, 230, 232–234, 236, 238, 244, 246–250, 252–254, 265–267, 269, 274, 278–280, 283–285, 289–292, 294, 295, 297, 300, 302, 305, 306, 310, 311, 314–317, 320, 322, 329, 331, 334, 336, 338, 341, 342, 344–348, 350, 352, 355, 357–361, 363, 365, 366, 370–372, 375, 378, 380, 382, 383, 385, 386, 390–392, 394, 403, 406, 409, 412, 414, 418, 419, 422, 424, 427, 429, 431, 433, 434, 436, 437, 442, 443, 445–448, 450, 457, 458, 465, 468, 478–480, 483, 484, 487, 490, 492, 494, 495, 497, 498, 500, 501, 504, 506–508, 511, 512, 514, 515, 517, 523, 525, 526, 529, 530, 532–534, 536, 537, 539–541, 543–547, 549–553, 555, 557, 558, 560, 561, 563, 565–567, 569, 570, 572, 574, 577, 580, 581, 583, 584, 587, 591–600, 602, 605, 607, 609–617, 619, 621, 622, 624–627, 629
- Manufacturing application, 13, 43, 44, 72, 87, 109, 157, 217, 262, 264, 277, 288, 290, 331, 389, 390, 456, 457, 601, 603
- Manufacturing menu bar, 56, 87, 147, 149, 205, 384, 580, 592
- Material appearance editor dialogue window, 31–33
- Material definition dialogue window, 30, 31, 33
- Material removal display icon, 267, 299
- Material removal simulation, 60, 61, 92, 93, 138, 139, 147, 148, 275, 445, 446
- Materials dialogue window, 29
- Message bar, 133, 179, 286
- Mill menu bar, 84, 120, 128, 167, 181, 191, 202, 225, 477, 532, 536, 557, 565, 577, 580, 587, 613
- Mill volume, 107, 120, 121, 124, 126, 128, 132, 133, 135, 158, 167, 168, 173, 174, 179, 181, 182, 186, 189, 202, 261, 276, 277, 282, 286, 389, 430, 435, 439, 443, 455, 456, 477, 482, 486, 489, 490, 492–494, 498, 500, 503, 505, 506, 510, 513, 515, 519, 522, 523, 525, 528, 531, 532, 536, 537, 539, 540, 542, 543, 545, 546, 548, 550, 552, 554, 556, 557, 559, 560, 562, 564
- Mill volume application toolbars, 121, 168, 181
- Mill window, 107, 217, 227, 228
- MILLING
  - tool, 257
- Milling work centre dialogue window
  - name; type; post processor; number of axis, 50, 80, 117, 162, 222, 223, 252, 253, 433, 465, 466, 607, 608
- Model application graphic user interface (GUI) window, 16
- Model properties
  - prepare, 27, 28, 35, 36
- Model tree, 17, 49, 51, 52, 54, 56, 57, 60, 79, 81, 83, 85, 87, 89, 92, 116, 118, 119, 135, 138, 142, 147, 161, 163, 164, 166, 167, 181, 201, 202, 205, 222–224, 254, 262, 263, 266, 267, 288, 289, 292, 293, 295–297, 299, 300, 306, 311, 315, 318–320, 336, 369, 374, 375, 379, 380, 396, 403, 406, 413, 414, 418, 419, 421, 428, 429, 432, 443, 445, 461, 465–468, 524, 574, 576, 578, 580, 582–584, 587, 588, 590, 607, 609
- Mouse pointer
  - X-symbol, 20, 26
- N**
- NC CHECK group, 61, 93, 148, 446
- NC CHECK menu manager dialogue box, 60, 92, 93, 138, 148, 445
- NC DISP group
  - step size; run, 92
- NC features and machining group, 265
- NC icon, 262, 276, 288
- NC MODEL group, 246, 247
- NC MODEL menu manager dialogue box
  - NC MODEL group, 246–248
- NC process icon, 320
- NC SEQ SURFS and SURF PICK groups, 194, 195, 234
- NC SEQUENCE group
  - seq setup; play path; customize; done seq, 134, 135, 179, 181, 190, 191, 231, 237, 239, 286, 287, 354, 356, 443, 486, 487, 489, 498, 499, 505, 506, 513, 515, 531, 532, 539, 545, 550, 629, 631
- NC SEQUENCE menu manager dialogue box, 129, 135, 136, 174, 175, 180, 187, 188, 190, 191, 194, 196, 198, 200,

- 226, 227, 230, 231, 237, 283, 341, 440, 483, 494, 495, 504, 511, 519, 566, 568, 571, 572, 614, 630
  - Nccheck\_type, 58–60, 89, 91, 92, 139
  - NCSEQ SURFS group, 198, 235–237
  - NC-WIZARD dialogue window, 244
  - New dialogue box, 14, 41, 42, 70, 108, 241, 242, 329, 330, 357, 358, 389, 390, 456, 602
  - New file options dialogue window, 15, 42, 71, 243, 330, 457, 602, 603
  - New icon, 14, 69, 108, 192, 203, 241, 329, 357, 389, 456, 601
- O**
- Open dialogue window
    - file name; type, 64
  - Open dialogue window in concise form
    - file name; type, 45, 64, 73, 95, 109, 110, 151, 208, 209, 246, 332, 359, 385, 391, 448, 449, 458, 597, 599, 603
  - Operation icon
    - machine icon, 51, 81, 117, 223, 253, 337, 365, 397, 434, 466, 524, 608
  - Operations
    - resume; activate, 157, 201, 241, 289, 446, 455, 574, 575
  - Options tab
    - options panel; overall dimensions; linear offset groups; and rotation offsets, 51, 75, 113, 126, 127, 158, 173, 186, 229, 247, 281, 316, 333, 361, 393, 438, 460
  - OP010 (MILL01), 318, 319
- P**
- Parameters panel, 86
  - Parameters tab, 51, 55, 143, 205, 374, 411, 416, 427, 579, 582, 586, 590
  - Part surface, 37–39, 52, 54, 78, 86, 114, 167, 570
  - PATH menu manager dialogue box
    - PATH group; OUTPUT TYPE group, 62, 94, 149, 206, 383, 447, 592, 593, 595
  - PLAY PATH dialogue box, 57, 87, 88, 136, 137, 147, 180, 181, 190, 200, 205, 230, 239, 274–276, 286, 287, 304, 305, 310, 314, 317, 318, 355, 356, 375, 376, 380, 414, 415, 418–420, 429, 430, 443, 444, 487–489, 498, 499, 506, 514, 515, 523, 532, 540, 545, 551, 557, 563, 572, 573, 580, 583, 587, 591, 629–631
- PLAY PATH group
- compute CL; screen play; NC check; gouge check, 136, 179, 190, 200, 230, 237, 238, 286, 354, 443, 487, 498, 505, 514, 522, 531, 539, 545, 550, 556, 562, 572, 629
- Play path icon
- play path, 56, 87, 147, 580
- Pocket, 107, 261–264, 291, 292, 299–301, 304–306, 319
- Pocket feature dialogue box,
  - feature name; define feature floor; define program zero, 291
- Pocket icon
  - pocket, 291
- Pocket milling operation, 300, 304–306
- POCKET1[OP010], 299
- Post a CL file icon, 63, 95, 151, 208, 384, 448, 597, 599
- PP LIST group
  - UNCX01.P12, 96, 153, 210, 322, 598, 600
- PP LIST menu manager dialogue box
  - UNCX01.P12, 64, 65, 153, 209, 210, 321, 322, 386, 449, 450
- PP OPTIONS menu manager dialogue box
  - Verbose; Trace, 64, 95, 152, 321, 385, 449, 597, 599
- Profile milling, 141, 142, 146–148, 154
- Project icon, 125, 171, 185, 280, 372, 409, 424, 437, 480, 491, 501, 508, 517, 526, 534, 541, 547, 553, 558

**R**

- Rectangle icon
  - centre rectangle, 19
- Reference icon, 123, 184, 479
- Reference model icon
  - assembly reference model, 44, 72, 109, 331, 359, 391, 457, 603
- Reference tab
  - type section box; machine references section box, 85, 146
- References dialogue box, 123, 124, 170, 184, 279, 350, 351, 371, 407, 408, 422, 423, 479, 480
- References icon, 170, 279, 371, 407, 422
- Retract setup dialogue box
  - type; reference, 285, 497, 531, 539, 616
- Rough speed, 270, 302, 308, 312
- Roughing icon tab

- roughing; volume rough, 128
- Run, 61, 93, 139, 318, 445
- S**
- Save a CL file icon, 61, 93, 149, 206, 382, 446, 592, 594
- Save a copy dialogue window
  - new name
  - type, 62, 63, 95, 150, 151, 207, 210, 320, 321, 383, 384, 448, 593, 596
- Save icon, 36
- SEL MENU group
  - OP010; quit sel, 61, 94, 149, 206, 382, 447, 592
- Select dialogue box, 26, 27, 196, 234, 291–294, 296, 569, 570, 617, 618, 624, 625
- SELECT FEAT menu manager dialogue box, 61, 94, 149, 206, 382, 383, 446, 592, 594
- Select hole diameter dialogue box, 298
- SELECT SRFS dialogue box, 266
- SELECT SRFS group, 197, 198, 234, 235, 266, 292, 293, 295, 296, 569, 570, 617, 618, 624, 625
- SEQ SETUP group
  - tool; parameters; volume; window; retract surf, 129, 134, 174, 188, 191, 226, 283, 341, 486, 529, 536, 543, 544, 549, 555, 560, 566, 614
- Silhouette window type, 228
- Sketch application toolbar or ribbons, 19
- Sketch dialogue box, 17, 18, 37, 121, 122, 168, 169, 183, 278, 370, 406, 407, 422, 436, 478, 490, 500, 507, 515, 516, 525, 526, 533, 541, 546, 552, 558
- Sketch icon, 17, 36, 369, 406, 422, 477, 490, 500, 506, 515, 525, 540, 546, 552, 558
- Sketch plane group
  - plane section box; referenc setion box; and orientation section box, 17, 121, 168, 183, 278, 478, 490, 500, 507, 516, 525, 533, 541, 546, 552, 558
- Sketch tools, 18, 169, 183, 279, 370, 407, 437, 501, 516, 526, 533, 541, 547, 552, 558
- Sketch view icon, 122, 169, 183, 423
- Slot, 261, 262, 294–296, 311, 314, 319
- Slot feature dialogue box
  - feature name; define feature floor; define program zero, 294–296
- Slot icon
  - slot, 294
- Slot milling dialogue window, 311, 314
- SLOT1 [OP010], 311
- SPINDLE\_SPEED, 55, 56, 86, 87
- STATUS information bar, 249, 392
- STEP\_DEPTH, 55, 56, 86
- Step feature dialogue box
  - feature name; define feature floor; define program zero, 292, 293
- Step icon, 292
- Step milling dialogue window, 306, 307, 310
- STEP1 [OP010]
  - create toolpath, 306
- STEP\_OVER, 86
- Steps, 261–263
- Step size, 61, 93, 139, 147, 445
- Stock
  - workpiece, 47, 69, 75–77, 107, 112, 113, 116, 141, 157, 159, 217, 219, 241, 246–248, 329, 333, 357, 362, 389, 394, 455, 460, 605
- Suppress dialogue box, 166, 263
- Surface milling, 191–194, 197, 200, 201, 217, 231, 233, 235, 238, 239, 455, 565–568, 570, 571, 573, 601, 610, 613, 615, 616, 621–623, 630, 631
- T**
- TAP file
  - notepad, 66, 97, 154, 211, 323, 387, 451, 600
- Text dialogue box, 37–39
- Text icon, 37
- Three axes machining process, 107
- TOLERANCE, 86
- Tool icon, 54, 85, 142, 203, 374, 577, 581, 584, 588
- Tool path properties dialogue window, 269, 270, 273, 302, 304, 308, 309, 311–313
- Tool path properties tab, 269, 302, 307, 311
- Tools setup dialogue window
  - general tab content, 53, 83, 84, 120, 130, 143, 165, 175, 176, 192, 193, 203, 224–226, 232, 253, 254, 256, 257, 283, 338–340, 342, 366, 367, 399, 400, 402, 476, 483, 495, 496, 504, 511, 520, 529, 537, 544, 549, 555, 561, 566, 577, 581, 584, 588, 609, 614, 622
- Top datum plane, 17, 19
- TUNGSTEIN CARBIDE
  - tool, 255–259
- Type dialogue box, 125, 171, 172, 185, 280, 372, 409, 424, 437, 438, 480, 481,

- 492, 501, 502, 508, 509, 517, 518,  
526, 527, 534, 541, 542, 547, 553,  
558, 559
- Type group  
  manufacturing radio button; NC assembly  
  radio button, 14, 42, 70, 242, 329,  
  357, 389, 456, 571, 602
- U
- Use default template, 14, 242, 330, 390, 456,  
602
- V
- Volume rough, 107, 120, 128, 136, 137, 139,  
141, 157, 158, 166, 174, 177, 180,  
181, 187–191, 217, 225, 231, 261,  
262, 277, 283, 285, 287, 389, 440,  
442–444, 455, 456, 482, 483, 488,  
489, 494, 495, 497, 499, 503–506,  
510, 511, 513–515, 519–524, 529,  
530, 532, 536–538, 540, 543, 544,  
546, 549–551, 555–557, 560–563
- Volume rough milling, 107, 120, 128, 136,  
137, 139, 141, 157, 158, 166, 177,  
180, 181, 188–191, 217, 231, 262,  
277, 283, 285, 287, 442–444, 455,  
456, 488, 504, 540, 546
- operations; process, 107, 444, 483, 488,  
489, 495, 497, 499, 505, 506, 511,  
513–515, 520, 522–524, 529, 530,  
532, 537, 538, 540, 544, 546,  
549–551, 555, 557, 561, 563
- W
- Wireframe display, 137, 180, 190, 191, 200,  
430, 444
- Work centre icon  
  Mill; lathe; wire EDM, 50, 80, 117, 162,  
  222, 252, 254, 336, 364, 396, 432,  
  465, 607, 609
- Workpiece  
  stock, 47, 48, 69, 75, 76, 82, 83, 85, 86,  
  107, 112–114, 116, 118, 121–125,  
  127, 128, 137, 141, 158–160, 163,  
  167–170, 174, 183, 184, 186,  
  195–197, 218–220, 224, 228, 229,  
  234, 235, 246–250, 266, 275, 278,  
  279, 281, 289–335, 349, 351, 353,  
  361–363, 379, 393, 394, 398, 417,  
  423, 428, 431, 437, 455, 459–464,  
  467, 478–480, 482, 487, 488,  
  490–492, 499–503, 507, 508,  
  516–519, 523–527, 533–535, 541,  
  542, 546–548, 552–554, 558, 559,  
  564, 565, 573, 574, 576, 591
- Workpiece icon  
  assembly workpiece, 75, 112, 158, 218,  
  333, 361, 393, 459